KitchenAid® COOKTOP PARTS

30" Free−Standing
DESIGNER STYLE

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

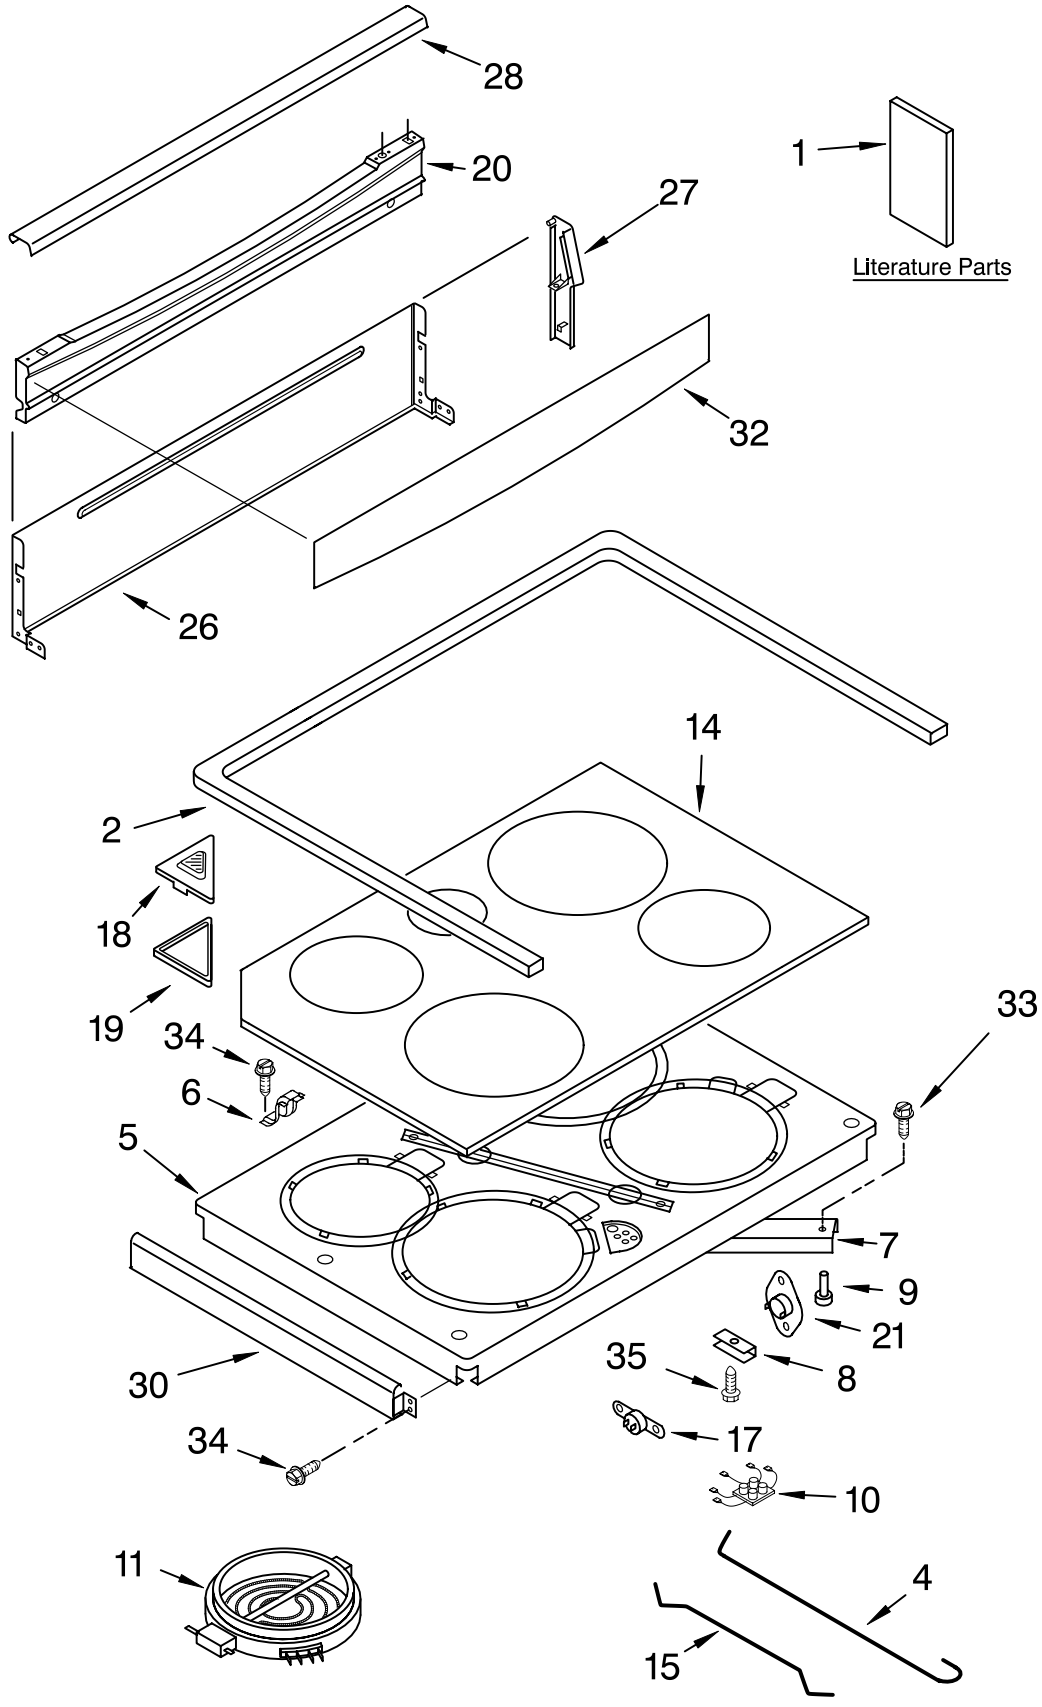

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0

(White) (Designer Biscuit) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9755234	Installation Instructions
	LIT9754287	Use & Care Guide
	LIT9754365	Tech Sheet
	LIT9754373	Wiring Diagram
	LIT3191638	Tips, Safety Cook
	LIT9752775	Template, Anti−Tip
2	9781614	Gasket, Silicone
4	9781459	Rod, Large Element
5	9752892	Support, Element
6	9751629	Bracket, Pivot
	9752003	Washer, Pivot
7	9781553	Brace, Support
8	9753691	Clip, Support (4)
9	9750969	Bumper, Rubber
10	9781936	Hot Light
11		Element, Surface
	8523697	1500W − LR
	8523696	1800W − RF
	8523693	1000/2400W − LF
	8523694	2200W − RR
14		Cooktop, Ceran
	9753711CW	White
	9753711CC	Biscuit
	9753711CB	Black
15	9781460	Rod, Small Element
17	341196	Thermo Disc
18	9751800	Cover, Vent
19	9751841	Gasket, Vent Cover
20		Backsplash
	9781896GW	White
	9781896GC	Biscuit
	9781896GB	Black
21	9751984	Bimetal
26	9751664	Cover, Backsplash
27		Endcap, Backsplash Right
	9781885FW	White
	9781885FC	Biscuit
	9781885FB	Black
		Left
	9781884FW	White
	9781884FC	Biscuit
	9781884FB	Black
28		Cover, Light
	9751327	White
	9753320	Biscuit
	9751632	Black
30		Trim, Cooktop Right
	9751275PW	White
	9751275PC	Biscuit
	9751275PB	Black
		Left
	9751276PW	White
	9751276PC	Biscuit
	9751276PB	Black
32		Glass, Backsplash
	9753910CW	White
	9753910CC	Biscuit
	9753910CB	Black
	9781987	Stainless
33	9780272	Screw, 10−16 x 1/2
34	9780265	Screw, 10−16 x 3/8
35	9751871	Screw, 10−16 x 1

DOOR AND DRAWER PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

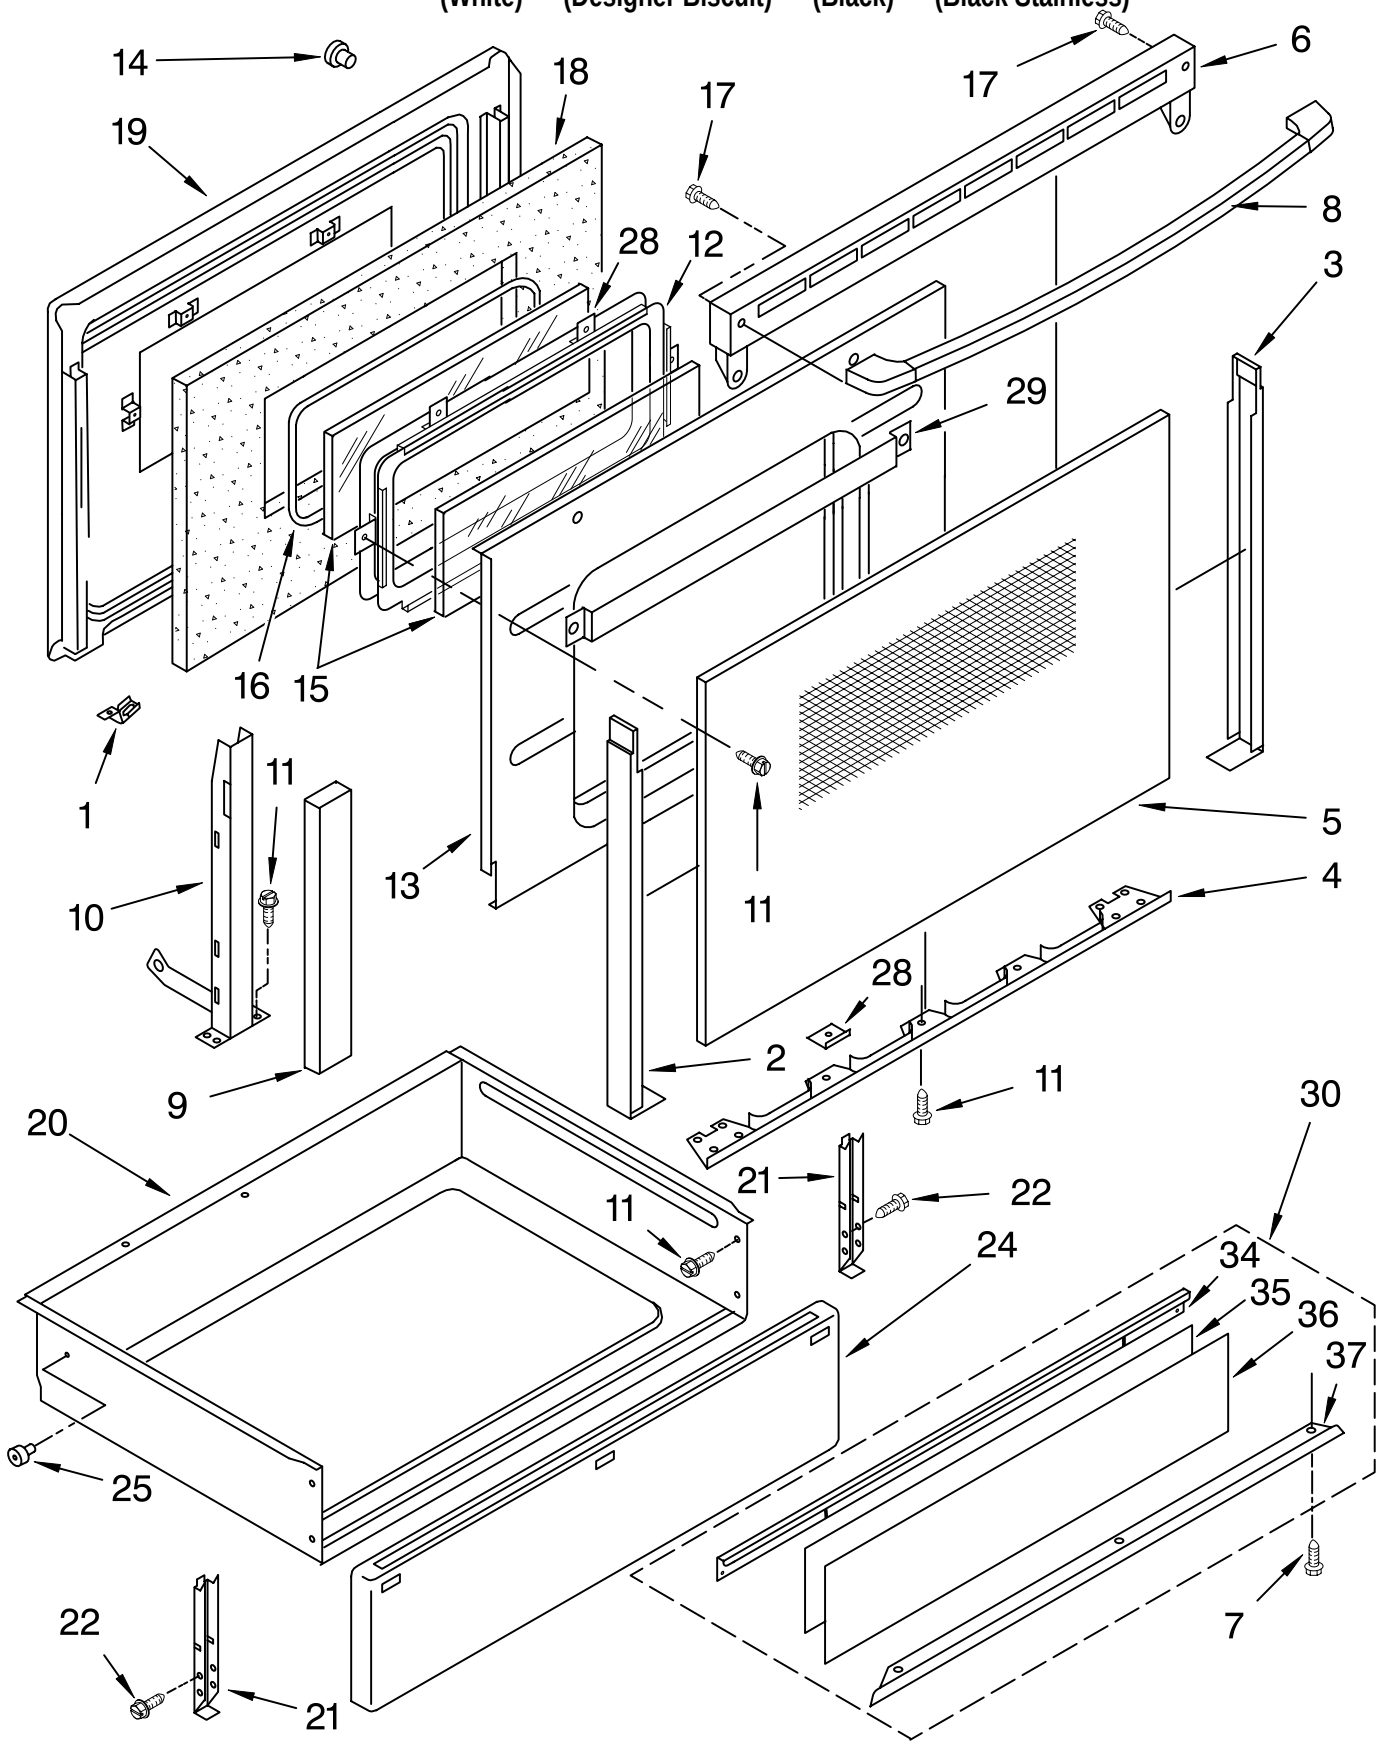

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9750676	Retainer, Glass
2		Trim, Door−Left
	9782003PW	White
	9782003PC	Biscuit
	9782003PB	Black
3		Trim, Door−Right
	9782004PW	White
	9782004PC	Biscuit
	9782004PB	Black
4		Trim, Door Bottom
	9781209PW	White
	9781209PC	Biscuit
	9781209PB	Black
5		Glass, Door
	9781627PW	White
	9781627PC	Biscuit
	9781627PB	Black
6		Vent, Door
	9753498GW	White
	9753498GC	Biscuit
	9753498GB	Black
	9781659	Gasket, Door Vent
	9781490	Seal, Door Vent Side
8		Handle, Door
	9780523PW	White
	9780523PC	Biscuit
	9780523PB	Black
9	9781449	Gasket, Door Glass
10	9782033	Hinge, Door R or L
11	9780265	Screw, 10−16 x 3/8
12	9781602	Frame, Window
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Pyro Door
16	9755177	Seal, Glass
17	9781072	Screw, 10−24 x 3/8
18	9754006	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	9780272	Screw, 10−16 x 1/2
24		Front, Drawer
	9782108PW	White
	9782108PC	Biscuit
	9782108PB	Black
	9782109PB	Stainless
25	423713	Support, Roller
	90296	Clip
28	9781502	Retainer, Glass(8)
29	9750693	Channel, Heat
30		Stainless Model Only
34	9750614PB	Trim, Drawer−Top
35	9753329	Spacer
36	9754062	Panel, Drawer
37	9750613PB	Trim, Drawer−Btm

OVEN CHASSIS PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

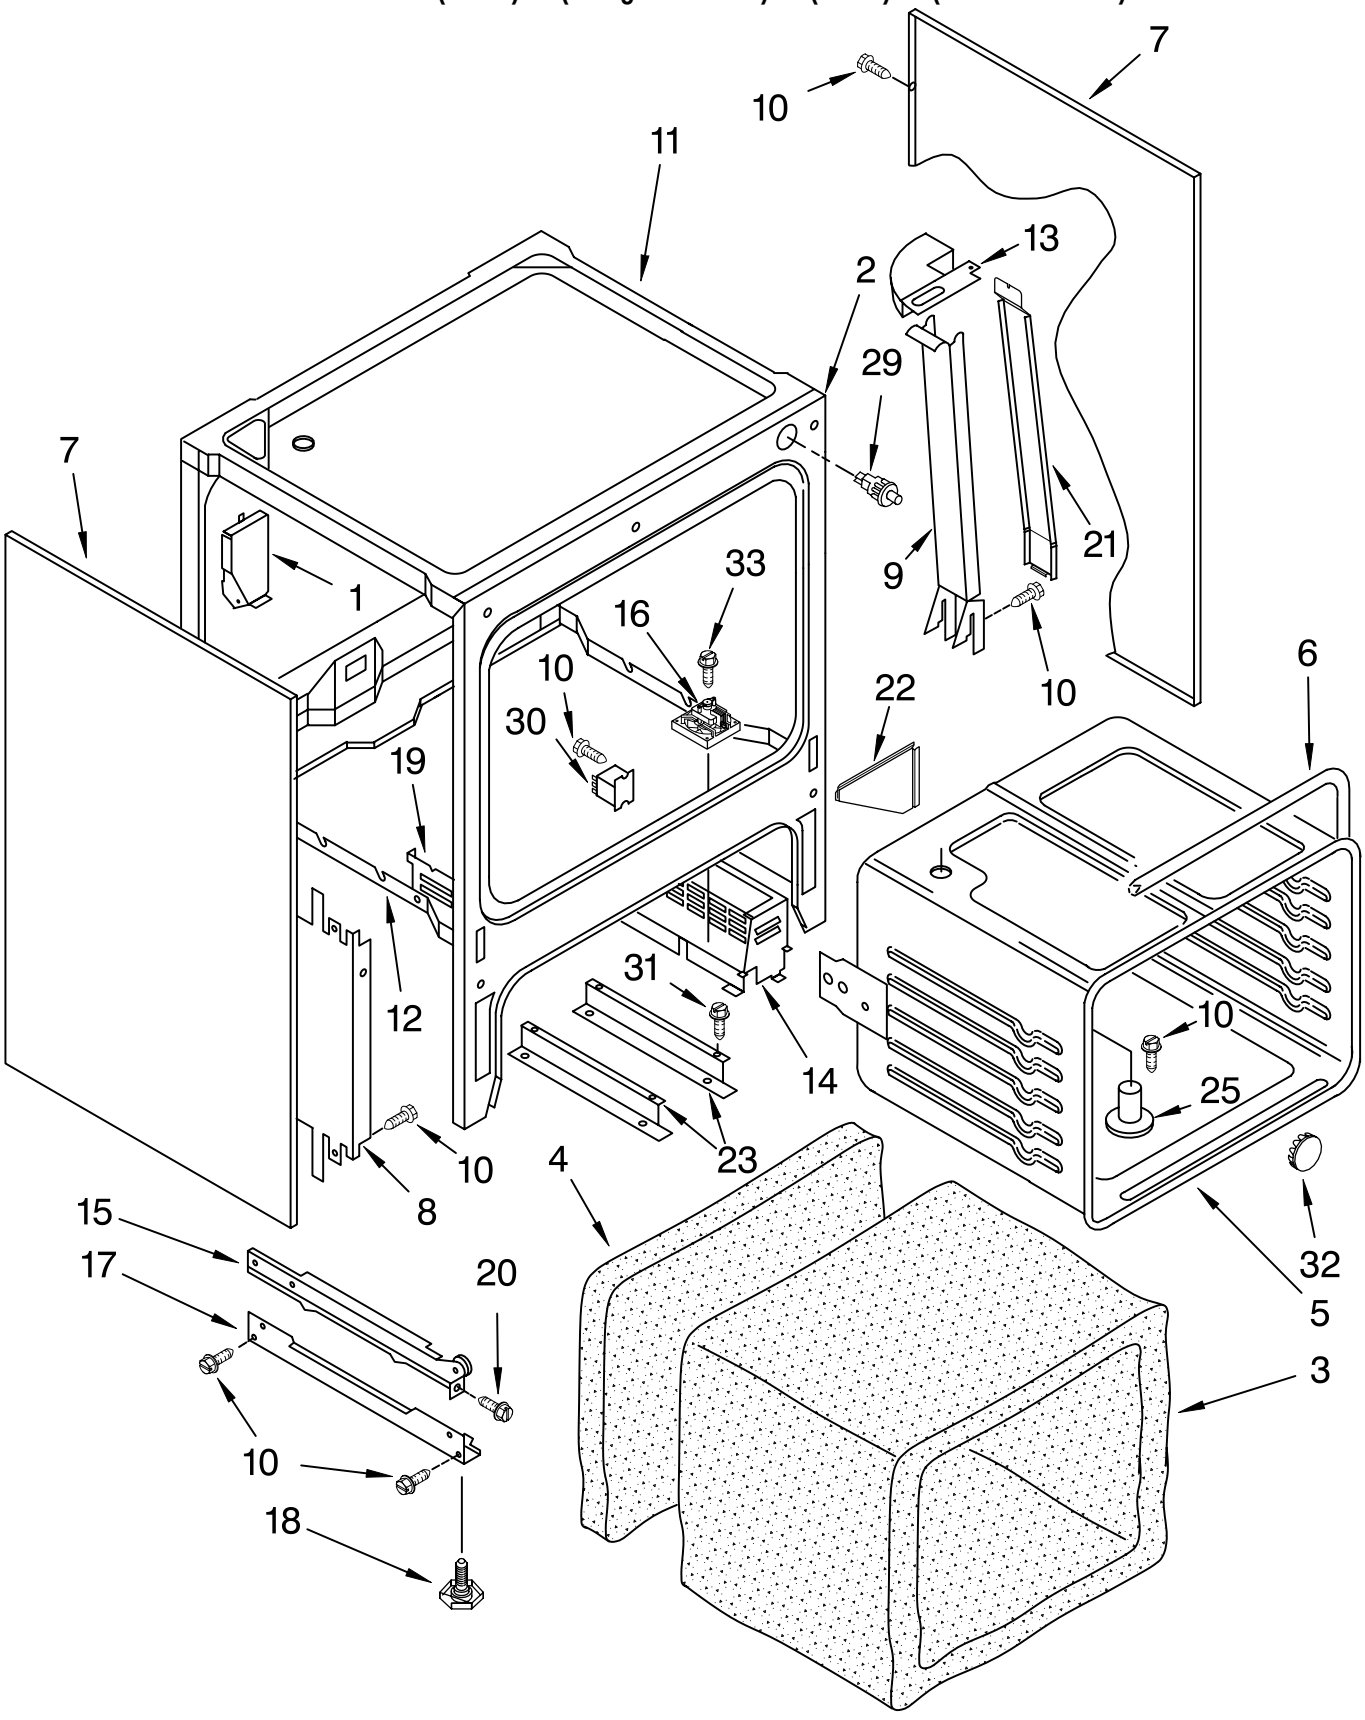

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754011	Insulation, Wrap
4	9754000	Insulation, Rear
5	9781293GM	Oven Liner
6	9755179	Gasket Oven
7		Oven, Side L or R
	9781907PW	White
	9781907PC	Biscuit
	9781907PB	Black
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
10	9780265	Screw, 10−16 x 3/8
11	9752637	Burner Box
12	9750142	Oven Bottom
13	9751653	Duct, Top
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Hinge, Door L or R
20	9780272	Screw, 10−16 x 1/2
21	9782329	Fan Duct, Cover
22	9782326	Heat Shield
23	9781904	Support, Rails
25	9753091	Vent, Tube
29	9755192	Door Switch
30	9755194	Relay, Dlb.
31	9780265	Screw, 10−16 x 3/4
32	9780578	Button, Plug
33	9751808	Screw, 8−18 x 1

OVEN PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

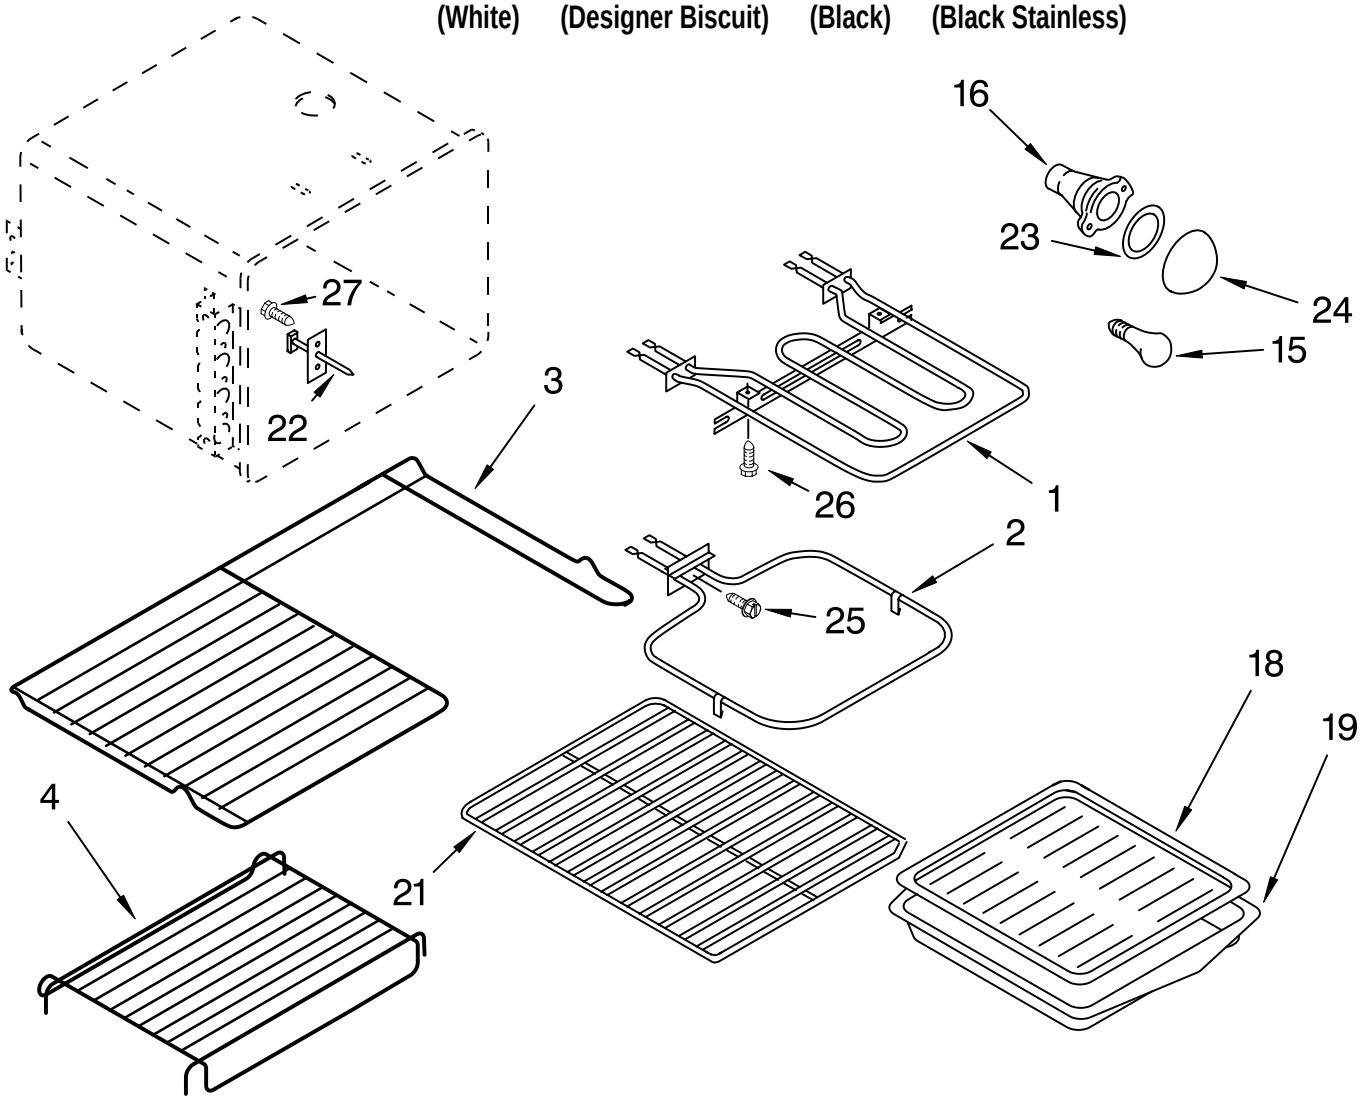

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
2	9750213	Element, Bake
3	8523815	Rack, Partial
4	9755548	Rack, Insert
15	8935	Bulb, Oven Light
16	9781050	Socket, Oven Light
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
21	9750498	Rack, Standard
22	9782081	Sensor
23	3184533	Gasket, Lens
24	9781049	Lens, Oven Light
25	9781509	Screw, 8−32 x 3/8
26	340184	Screw, 10−16 x 1.5
27	9780265	Screw, 10−16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

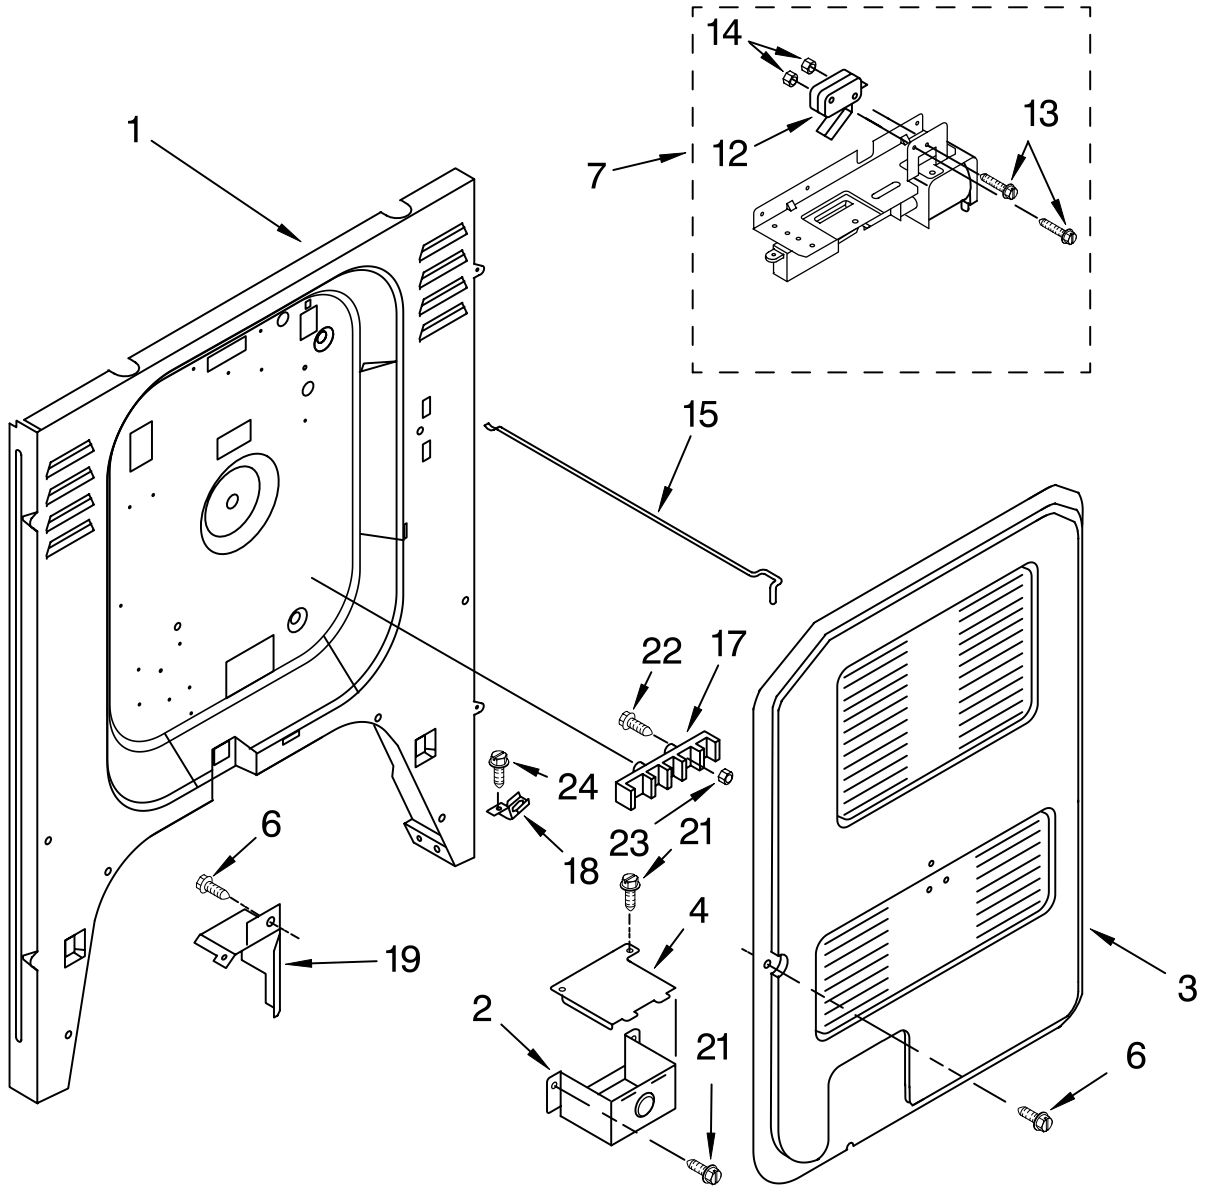

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back panel,Chassis
2	9752344	Box, Terminal
3	9751353	Panel, Rear Cover
4	9752345	Cover, Terminal Box
6	9780265	Screw, 10−16 x 3/8
7	9782611	Oven Lock Assembly
12	9754291	Switch, Interlock
13	9750887	Screw, 4−40 x 1
14	9750888	Nut
15	9750523	Rod, Lock
17	258076	Terminal Block
18	3169573	Ground Strap
19	9751798	Vent Back, Oven
21	9780272	Screw, 10−16 x 1/2
22	98884	Screw, 10−16 x 1
23	112432	Nut
24	690989	Screw, Ground 10−32 x 1/2

CONTROL PANEL PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

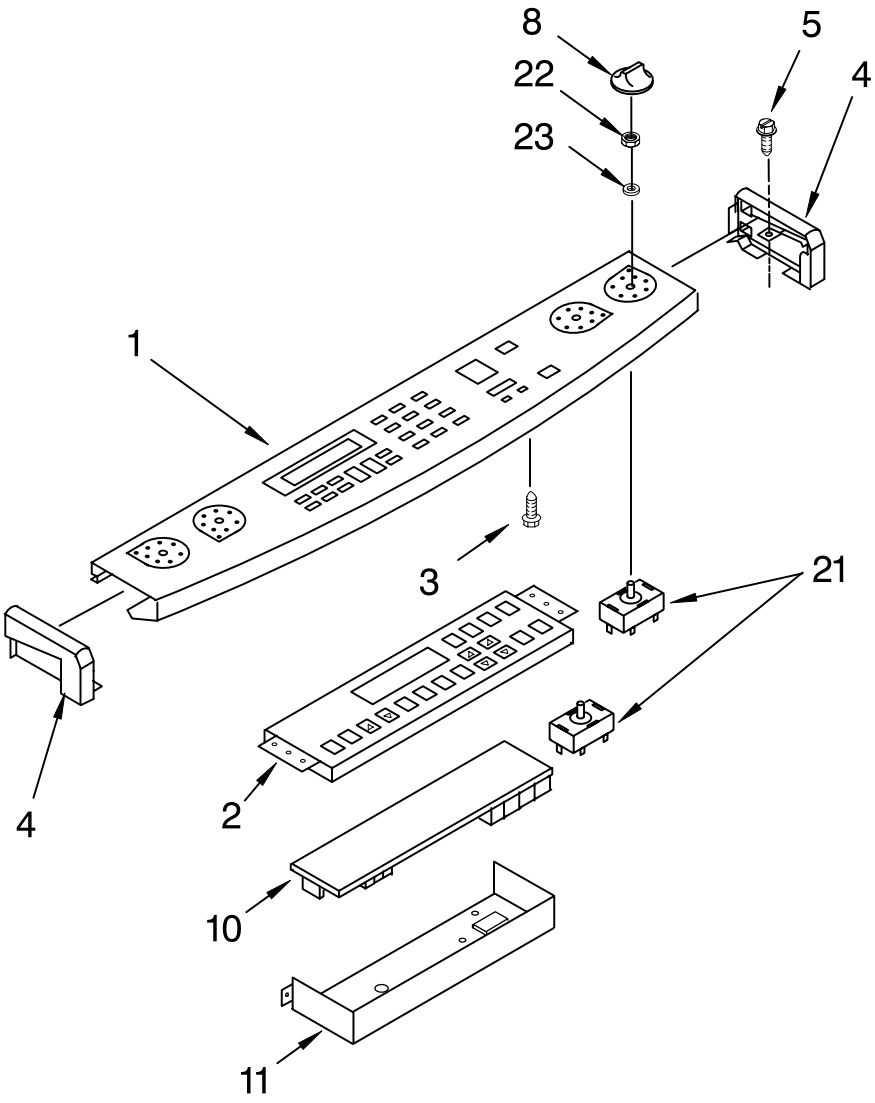

Illus. No.	Part No.	DESCRIPTION
1		Console, Glass
	9782420CW	White
	9782420CC	Biscuit
	9782420CB	Black
	9781488	Spacer
2	9782456	Board, Display
3	9780271	Screw, 8−18 x 1/2
4		End Cap (Right Hand)
	9751280FW	White
	9751280FC	Biscuit
	9751280FB	Black (Left Hand)
	9751279FW	White
	9751279FC	Biscuit
	9751279FB	Black
5	9780265	Screw, 10−16 x 3/8
8		Knobs, Control
	9750372FW	White
	9750372FC	Biscuit
	9750372FF	Black
10	9782438	Board, Power
11	9755021	Shield, Control Panel
21		Switch, Infinite
	9751364	1500W, LR
	9751363	1800W, RF
	9755175	1000−2400W, LF
	9751362	2200W, RR
22		Nut, Mounting
	3400958	Single Element
23	9781455	Seal, Switch (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KERC700LWH0, KERC700LBT0, KERC700LBL0, KERC700LBS0
(White) (Designer Biscuit) (Black) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

	242828	Wire, Black 12 Ga. 150°c
	242820	Wire, Black 14 Ga. 150°c
	242821	Wire, Blue 14 Ga. 150°c
	242822	Wire, Brown 14 Ga. 150°c
	242830	Wire, Brown 14 Ga. 200°c
	242823	Wire, Green 14 Ga. 150°c
	242824	Wire, Orange 14 Ga. 150°c
	242829	Wire, Red 12 Ga. 150°c
	242825	Wire, Red 14 Ga. 150°c
	242831	Wire, Red 14 Ga. 200°c
	242826	Wire, White 14 Ga. 150°c
	242827	Wire, Yellow 14 Ga. 150°c
	242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

	72017	White
	72107	Almond
	511873	White Porcelain (2 Oz.)
	4392899	Biscuit

NOTE: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (12 oz.)

	350930	White
	350956	Almond
	285006	Superior Black
	206922	Primer (White)
	4392901	Biscuit

PAINT, BULK (1 qt.)

	799344	White (Uncut)
	978883	Almond (Uncut)
	4392900	Biscuit

REFINISHING MATERIAL

	799832	Kit, Porcelain Repair (White)
	242756	Touch−Up Self−Clean (1/2 Pt.)

CLEANER, COOKTOP

	9780196	Glass Cleaner
	3183488	Scraper

ACCESSORIES

	241430	Foil, Aluminum Oven (18" X 25')

LUBRICANT

	261582	Grease

WIRING HARNESS PARTS

	9782462	Harness, Wire (Main Harness)
	9782183	Harness, Wire (Cooktop)
	9755121	Harness, Wire (Ceran)
	9782443	Harness, Wire (Pwr Brd to Dsply)
	9755193	Harness, Wire (Oven Door)
	9782182	Harness, Wire (Dual Switch)
	9755120	Harness, Wire (Fan/BMS)
	9781655	L2 − Electric
	20082084	Tie, Wire
	9781769	Harness, Wire (Front Console)
	690989	Screw, Ground
	90016	Clip, Wire
	9754366	Wire, Jumper (S/I No Bake)
	9782111	Wrap, Tie
	313660	Clip, Ground Wire
	98997	Clip, Wire